

3B


Finish Blocker

Industrial construction, ease of use and accuracy for reliable finish blocking.

satisloh[®]



3B blocks the lens face down to avoid lens damage and errors due to imbalance

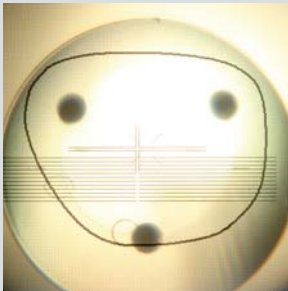

The large LCD screen guides the operator to the exact lens layout position



Features and Benefits:

- **Industrial construction:** The 3B is designed with few moving parts for simplified, continuous operation and minimal downtime. The industrial design is rounded out by a large split screen to easily view lens layout and job data and an integrated keypad.
- **Semi-automatic finish blocking:** Unique design utilizes image projection to display lens image over LCD layout screen guiding the operator to an exact lens layout position. Custom blocking options include geometric center, optical center or manual placement.
- **Parallax and distortion free blocking:** Accidental refraction is reduced by projecting the image of the front surface of the lens. The lens is blocked with front surface down, avoiding lens damage and blocking errors due to lens imbalance.
- **Ergonomic design:** Large heads-up display provides the operator with an ergonomic operating position. Ergonomics are furthered with a foot switch to initiate the blocking process.
- **Variable block configuration:** The 3B can be configured to any metal or plastic block design.
- **Additional features:** Data storage for up to 200 jobs.
- **Options:** Barcode scanner

Technical Information:

- **Power:** 100 – 240 V, 50/60 Hz, 150 W
- **Dimensions (w x d x h):** 216 x 490 x 457 mm / 8.5 x 19.3 x 18 inches
- **Weight:** 8.6 kg / 19 lbs
- **Communications** OMA/VCA interface or stand alone

Contact

Satisloh AG
 Neuhofstrasse 12
 CH - 6340 Baar
 Switzerland
 Phone: +41 (0) 41766 16 16
 Fax: +41 (0) 41766 16 10
 Mail: info@satisloh.com

www.satisloh.com

North America

Sales
 Phone: +1 262 255 6001
 Email: info.usa@satisloh.com

Service
 Phone: +1 262 255 6001
 Email: service.usa@satisloh.com

Europe

Phone: +49 (0) 6441 912 0
 Email: info.de@satisloh.com

Phone: +49 (0) 6441 912 222
 Email: service.de@satisloh.com

Asia

Phone: +852 27 56 7711
 Email: info.asia@satisloh.com

Phone: +852 2756 7654
 Email: service.asia@satisloh.com

satisloh®

© Satisloh / KH / June 2009
Subject to technical changes

