

# 4Ti


Frame Tracer

Fully automatic 3D tracer designed for all tracing applications.

**satisloh**<sup>®</sup>



4Ti's integrated monitor allows to review the traced shape

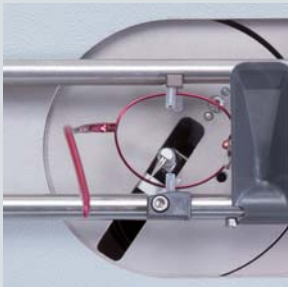

The vertical frame holder permits easy, upright loading



### Features and Benefits:

- **Accuracy:** The 4Ti traces both eyes for accurate DBL values. 2,000 point resolution encoder and 3D tracing ensure highly accurate reproduction and extraordinary repeatability.
- **Full range:** Effective at tracing high wrap frames as well as the smallest traceable eyewear for children.
- **Integrated monitor and keypad:** Integrated design provides the operator with traced shape image and ability to input data, all in a compact package.
- **Easy, upright loading** simplifies loading process and avoids frame shape distortion.
- **Shape modifier:** Allows modifying traced shapes with editing tools to create custom shape designs.
- **Additional features:** Internal memory stores over 100 frame shapes. The 4Ti comes complete with accessory kit, including calibration device, pattern/lens holder and dust cover.

### Technical Information:

- **Power:**  
100 – 240 V, 50/60 Hz, 150 W
- **Dimensions (wxdxh):**  
262 x 399 x 224 mm/  
7.7 x 15.7 x 8.8 inches
- **Weight:**  
7.7 kg / 16.9 lbs
- **Working range:**  
18-75 mm tracing
- **Options:**  
Barcode scanner
- **Communications:**  
OMA/VCA interface or stand alone

## Contact

**Satisloh AG**  
Neuhofstrasse 12  
CH - 6340 Baar  
Switzerland  
Phone: +41 (0) 41766 16 16  
Fax: +41 (0) 41766 16 10  
Mail: info@satisloh.com

www.satisloh.com

#### North America

Phone: +1 262 255 6001  
Email: info.usa@satisloh.com

#### Europe

Phone: +49 (0) 6441 912 0  
Email: info.de@satisloh.com

#### Asia

Phone: +852 27 56 7711  
Email: info.asia@satisloh.com

#### Service

+1 262 255 6001  
service.usa@satisloh.com

+49 (0) 6441 912 222  
service.de@satisloh.com

+852 2756 7654  
service.asia@satisloh.com

**satisloh**®

