


Dimension

Frame Tracer

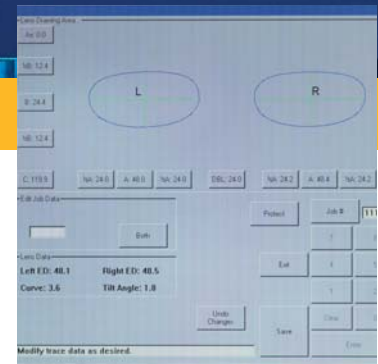

Advanced tracing of all frame styles, patterns, and lenses, including difficult high wraps.

satisloh[®]



Dimension automatically adjusts stylus pressure for delicate frames



The rotating frame table allows to trace even the highest wraps with maximum precision

Features and Benefits:

- **High wrap technology:** Unique rotating frame table automatically adjusts to accommodate any frame curvature. The intelligent software calculates necessary rotation for precise trace data.
- **Eliminates trace errors:** Automatically detects tracing errors and repeats tracing cycle without operator intervention.
- **Auto restart feature:** When interference or disruption occurs, the stylus will automatically reset itself and complete the tracing.
- **Shape morphing:** Allows modifying traced shapes in all dimensions to create custom lens designs with shape editing tools.
- Internal memory stores 10,000 frame shapes
- **Full 3D trace data:** Captures complete 3D data on frames and lenses for optimized lens size and bevel placement.
- **Easy to use touch-screen:** Integrated, smart software provides directional assistance. On-screen operations, maintenance and parts manuals can be accessed with the touch of a button.
- **Improved yields:** Rotating frame table technology minimizes the need for difficult compensations and eliminates unnecessary software calculations providing improved accuracy and yields.
- **Delicate frame tracing:** Reduced tracing pressure on lightweight, flexible and sharp angular frames due to auto-adjust stylus pressure.
- **OMA/ VCA compatible**
- Ethernet and wireless ready.

Technical Information:

- **Power:** 100-240 V, 50-60 Hz, 150 W
- **Weight:** 9 kg / 20 lb
- **Dimensions (wx dxh):** 318 x 442 x 549 mm / 12.5 x 17.4 x 21.6 inches
- **Working range:** 18-75 mm tracing



Contact

Satisloh AG
 Neuhofstrasse 12
 CH - 6340 Baar
 Switzerland
 Phone: +41 (0) 41766 16 16
 Fax: +41 (0) 41766 16 10
 Mail: info@satisloh.com

www.satisloh.com

North America

Phone: +1 262 255 6001
 Email: info.usa@satisloh.com

Europe

Phone: +49 (0) 6441 912 0
 Email: info.de@satisloh.com

Asia

Phone: +852 27 56 7711
 Email: info.asia@satisloh.com

Service

Phone: +1 262 255 6001
 Email: service.usa@satisloh.com

Phone: +49 (0) 6441 912 222
 Email: service.de@satisloh.com

Phone: +852 2756 7654
 Email: service.asia@satisloh.com

satisloh[®]

© Satisloh / KH / May 2009
 Subject to technical changes

