




Ophthalmic

Finishing

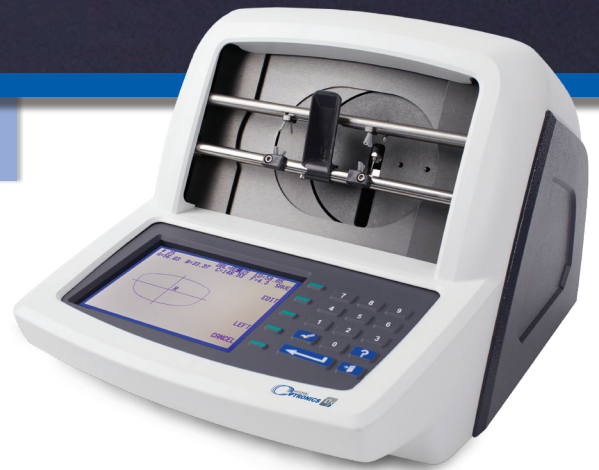

4Tx Tracer

- Industrial design and reliability
- Accurate 2 eye tracing and DBL measurement
- Full range – including wraps and small designs
- Integrated monitor and keypad
- Easy, upright loading orientation
- Rimless shape modifier

AUTOMATIC 3 DIMENSIONAL TRACER

Accuracy

The 4Tx traces both lenses for accurate DBL. A 2,000 point resolution encoder, as well as 3D tracing, ensures highly accurate reproduction and extraordinary repeatability.

Full Range

Ideal for all tracing environments and designed for tracing a wide range of frame styles and curves.

Integrated Monitor and Keypad




Provides the operator with traced shape image and ability to input data in a compact design.

Easy Upright Loading

Simplify loading and avoid shape distortion. Also eliminates the risk of debris damaging key electrical components.

Shape Modifier

Modify traced shapes with editing tools to create custom shape designs.

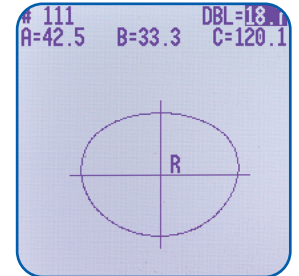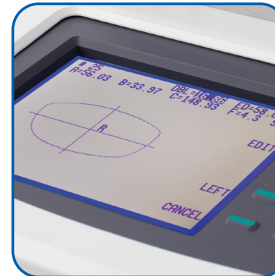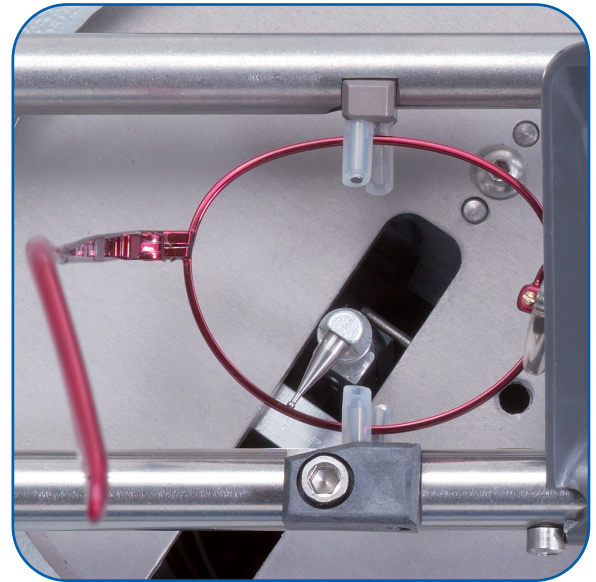

Additional Features

- Stores over 100 frame shapes
- Comes complete with accessory kit, including calibration device and pattern / lens holder
- One year parts and labor warranty

Range

- 18mm - 75mm tracing

Options

- Barcode reader

Communications

- OMA / VCA compatible
- Stand alone

Facilities

- Power: 100-240 VAC, 50-60Hz
- Height: 24.6 cm (9.7")
- Depth: 44.1 cm (17.4")
- Width: 26.2 cm (10.3")
- Weight: 7.4 kg (16.9 lbs)



Technology, capability and value combine to make the 4Tx the tracer of choice throughout the industry.

Now 4Tx takes this to a new level with improved reliability and consistency.

The 4Tx is backed by the industry's most reliable service and support team.

National Optronics equipment are distributed by DAC Technologies in North America and by Satisloh in the rest of the World. All technical data subject to change without notice. Verify details with Satisloh.

CONTACT

Satisloh AG
Neuhofstrasse 12
CH- 6340 Baar
Switzerland
Phone: +41 (0) 41766 16 16
Email: info@satisloh.com

www.satisloh.com

North America

Phone: +1 262 255 6001
Email: info.usa@satisloh.com

Europe

Phone: +49 (0) 6441 912 0
Email: info.de@satisloh.com

Asia

Phone: +852 27 56 7711
Email: info.asia@satisloh.com

Central & South America

Phone: +55 (11) 2930 8600
Email: info.latam@satisloh.com

Sales

Phone: +1 262 255 6001
Email: info.usa@satisloh.com

Phone: +49 (0) 6441 912 0
Email: info.de@satisloh.com

Phone: +852 27 56 7711
Email: info.asia@satisloh.com

Phone: +55 (11) 2930 8600
Email: info.latam@satisloh.com

Service

Phone: +1 262 255 6001
Email: service.usa@satisloh.com

Phone: +49 (0) 6441 912 222
Email: service.de@satisloh.com

Phone: +852 27 56 7654
Email: service.asia@satisloh.com

Phone: +55 (11) 2930 8600 (pt)
Phone: +57 300 798 3374 (es)
Email: service.latam@satisloh.com

satisloh[®]