





ES-trace

AUTOMATIC 3D TRACER



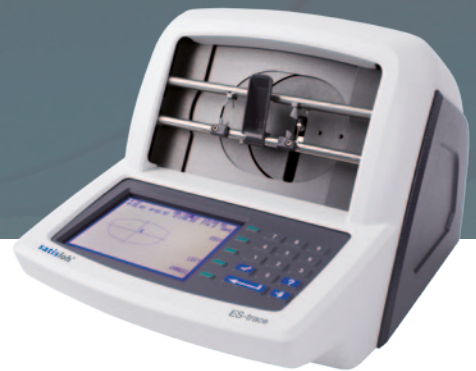

Integrated monitor allows review of the traced shape

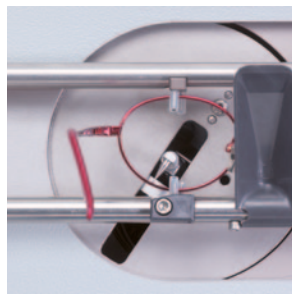

The vertical frame holder enables easy upright loading orientation



Integrated keypad gives operator the ability to input data in a compact design

FEATURES + BENEFITS

ES-trace is an easy-to-use tabletop automatic 3D frame tracer, designed for all tracing applications.

- Industrial design and reliability
- Accurate 2 eye tracing and DBL measurement
- Full range including wraps and small designs
- Integrated monitor and keypad
- Easy, upright loading orientation
- Rimless shape modifier

Accuracy: The ES-trace traces both lenses for accurate DBL values. A 2,000 point resolution encoder and 3D tracing ensure highly accurate reproduction and extraordinary repeatability.

Full range: Effective at tracing high wrap frames as well as the smallest traceable eyewear for children.

Integrated monitor and keypad: Provides the operator with traced shape image and ability to input data, all in a compact design.

Easy, upright loading: Simplifies loading and avoids shape distortion. Also eliminates the risk of debris damaging key electrical components.

Shape modifier: Modify traced shapes with editing tools to create custom shape designs.

OPTIONS + ADDITIONAL FEATURES

Additional features:

- Stores over 100 frame shapes
- Comes complete with accessory kit, including calibration device, pattern/lens holder

Options:

- Barcode scanner

TECHNICAL INFORMATION

Dimensions (wxdxh)	26,2 x 44,1 x 24,6 cm / 10,3 x 17,4 x 9,7 in
Weight	7,4 kg/ 16,9 lbs
Working range	18 mm – 75 mm tracing
Energy requirements	100 – 240v, 50/60 Hz. 150 W
Communications	OMA/VCA interface or stand alone

CONTACT

Satisloh AG
Neuhofstrasse 12
CH - 6340 Baar
Switzerland
Phone: +41 (0) 41766 16 16
Fax: +41 (0) 41766 16 10
Mail: info@satisloh.com

www.satisloh.com

North America

Europe

Asia

Middle & South America

Sales
Phone: +1 262 255 6001
Email: info.usa@satisloh.com
Phone: +49 (0) 6441 912 0
Email: info.de@satisloh.com
Phone: +852 27 56 7711
Email: info.asia@satisloh.com
Phone: +55 (24) 2233 8600
Email: info.latam@satisloh.com

Service
Phone: +1 262 255 6001
Email: service.usa@satisloh.com
Phone: +49 (0) 6441 912 222
Email: service.de@satisloh.com
Phone: +852 27 56 7654
Email: service.asia@satisloh.com
Phone: +55 (24) 2233 8686
Email: servicio.latam@satisloh.com

satisloh®