


VFT-MACRO-E

DIGITAL GENERATING MADE EASY



Large R6 PCD cutter for pre-cut and cribbing.

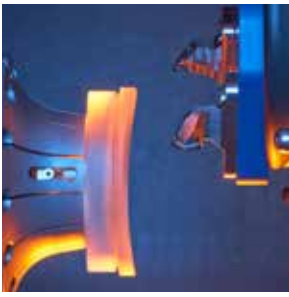

Auto-calibration of tools.

VFT-MACRO-E

The VFT-macro-E is an economically priced, manual load generator based on the successful VFT-macro, it features proven VFT technology and meets all requirements for high quality digital lens production. The system provides outstanding value and is the perfect machine for entering the world of digital generating.

FEATURES + BENEFITS

- VFT fast tool for ultimate surface accuracy and smoothness enables short “cut-to-polish” processes.
- No milling spindle; large R6 PCD cutter for pre-cut and cribbing.
- Uniform production quality and yield with inherently stable working chamber design.
- With a capacity of up to 25 lenses per hour, it’s the perfect solution for small labs.
- Green power-save mode: air bearings automatically turn off when machine is idle.
- User-friendly interface and easy operation
- Full compatibility with MES-360, Satisloh’s manufacturing execution system.

OPTIONS

- Mechanical engraving.
- Can be upgraded with All Format Software.
- Semi-automated machine calibration ensures accurate and repeatable results.
- Remote Diagnostics
- Upgrade to the full version of VFT-macro

TECHNICAL SPECIFICATIONS

Productivity	Up to 25 lenses/hour
Working Range	Concave: milling:-14.5 dpt
Lens Materials	All organic materials
Dimensions (wxdxh)	1100 x 1200 x 1500 mm/ 43 x 47 x 59 inches
Weight	<800 kg / 1,764 lbs



All technical data subject to change without notice. Verify details with Satisloh.

CONTACT

Satisloh AG
Neuhofstrasse 12
CH- 6340 Baar
Switzerland
Phone: +41 (0) 41766 16 16
Email: info@satisloh.com

www.satisloh.com

North America
Europe
Asia
Central & South America

Sales
Phone: +1 262 255 6001
Email: info.usa@satisloh.com
Phone: +49 (0) 6441 912 0
Email: info.de@satisloh.com
Phone: +852 27 56 7711
Email: info.asia@satisloh.com
Phone: +55 (11) 2930 8600
Email: info.latam@satisloh.com

Service
Phone: +1 262 255 6001
Email: service.usa@satisloh.com
Phone: +49 (0) 6441 912 222
Email: service.de@satisloh.com
Phone: +852 27 56 7654
Email: service.asia@satisloh.com
Phone: +55 (11) 2930 8600 (pt)
Phone: +57 300 798 3374 (es)
Email: service.latam@satisloh.com

satisloh®