


SPM/SPS-150

GRINDING AND POLISHING
FOR Ø 10-150 MM



Spherical polishing
up to \varnothing 150 mm

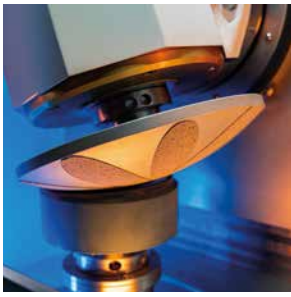

CT measuring system



Spherical grinding for
 \varnothing 10-150 mm



Dual spindle on SPM-150
(optional on SPS-150)

FEATURES + BENEFITS

Flexibility

- Machine duo for all steps of spherical processing: pre- & fine grinding, edging, polishing and tool dressing (aspherical processing optional)
- Grinding in standard & swivel mode
- Polishing in Synchrospeed mode

Efficiency

- Time-saving process control via optional integrated CT measuring system
- Fast and easy setup thanks to intuitive Satisloh graphical user interface BaSyS
- 360° tool swivel head offers full swivel range and saves space at the same time
- Integrated dressing spindle for polishing tools



Reliability

- Direct driven dual spindles on SPM-150 for high surface quality and low subsurface damage during grinding process
- Rigid polymer concrete base with 12x better vibration absorption than cast iron guarantees stable processes and repeatable results
- Improved cross-grinding adjustment (US patent no. US 9,446,494 B2)

Ease of use

- Small footprint for convenient integration
- Improved user panel with integrated handwheel
- User friendly maintenance due to automated door and easy to clean surfaces
- Graphical user interface Satisloh BaSyS allows easy and fast data input

OPTIONS + ACCESSORIES

- Fluid-based polishing
- Integrated polishing tool dressing spindle (SPS-150)
- Center thickness measuring system (SPM-150)
- Cleaning program (separate cleaning circuit with additional in- and outlet for optimal cleaning of working chamber and supply lines)
- Software modules for specific process steps
- HS-200 flexible & mobile automation system
- Coolant & chiller systems
- Workpiece receptions & chucks
- Diamond & dressing tools, axis adjustment tools
- Consumables

TECHNICAL INFORMATION

Dimensions (w x d x h)	1100 x 1660 x 1930 mm (43 x 65 x 76 in)
Working range	\varnothing 10 up to 150 mm
Weight	2220 kg / 4850 lbs
Tool diameter	SPM-150: \varnothing max. 180 mm

SPS-150:
 \varnothing max. 300 mm (with single tool spindle)

CONTACT

Satisloh AG
Neuhofstrasse 12
CH- 6340 Baar
Switzerland
Phone: +41 (0) 41766 16 16
Fax: +41 (0) 41766 16 10
Mail: info@satisloh.com

www.satisloh.com

North America

Europe

Asia

Middle & South America

Sales
Phone: +1 262 255 6001
Email: precision@satislohusa.com
Phone: +49 (0) 6441 912 0
Email: info.de@satisloh.com
Phone: +852 27 56 7654
Email: info.asia@satisloh.com
Phone: +55 (24) 2233 8600
Email: info.latam@satisloh.com

Service
Phone: +1 262 255 6001
Email: precision@satislohusa.com
Phone: +49 (0) 6441 912 555
Email: service.de@satisloh.com
Phone: +852 27 56 5058
Email: service.asia@satisloh.com
Phone: +55 (11) 2930 8600 (pt)
Phone: +57 300 798 3374 (es)
Email: service.latam@satisloh.com

satisloh®